





# CLIMAP<sup>D</sup>POOL

## Round Controller Running Status Checking

1. Press " for 5 seconds, it will enter into running status checking.
2. During this time, the display will show the status symbol "C0" and its corresponding value.
3. Change status through " and ", the corresponding value also changes.
4. Press " to quit "Running Status Checking" mode
5. Running status checking table:

Symbol	Content	Unit
C0	Inlet water temp	°C
C1	Outlet water temp	°C
C2	Ambient temp	°C
C3	Exhaust temp	°C
C4	Outer coil pipe temp	°C
C5	Gas return temp	°C
C6	Inner coil pipe temp	°C
C9	Radiator temp	°C
C10	Electronic expansion valve opening	P
C11	DC fan speed	r/min